 
 


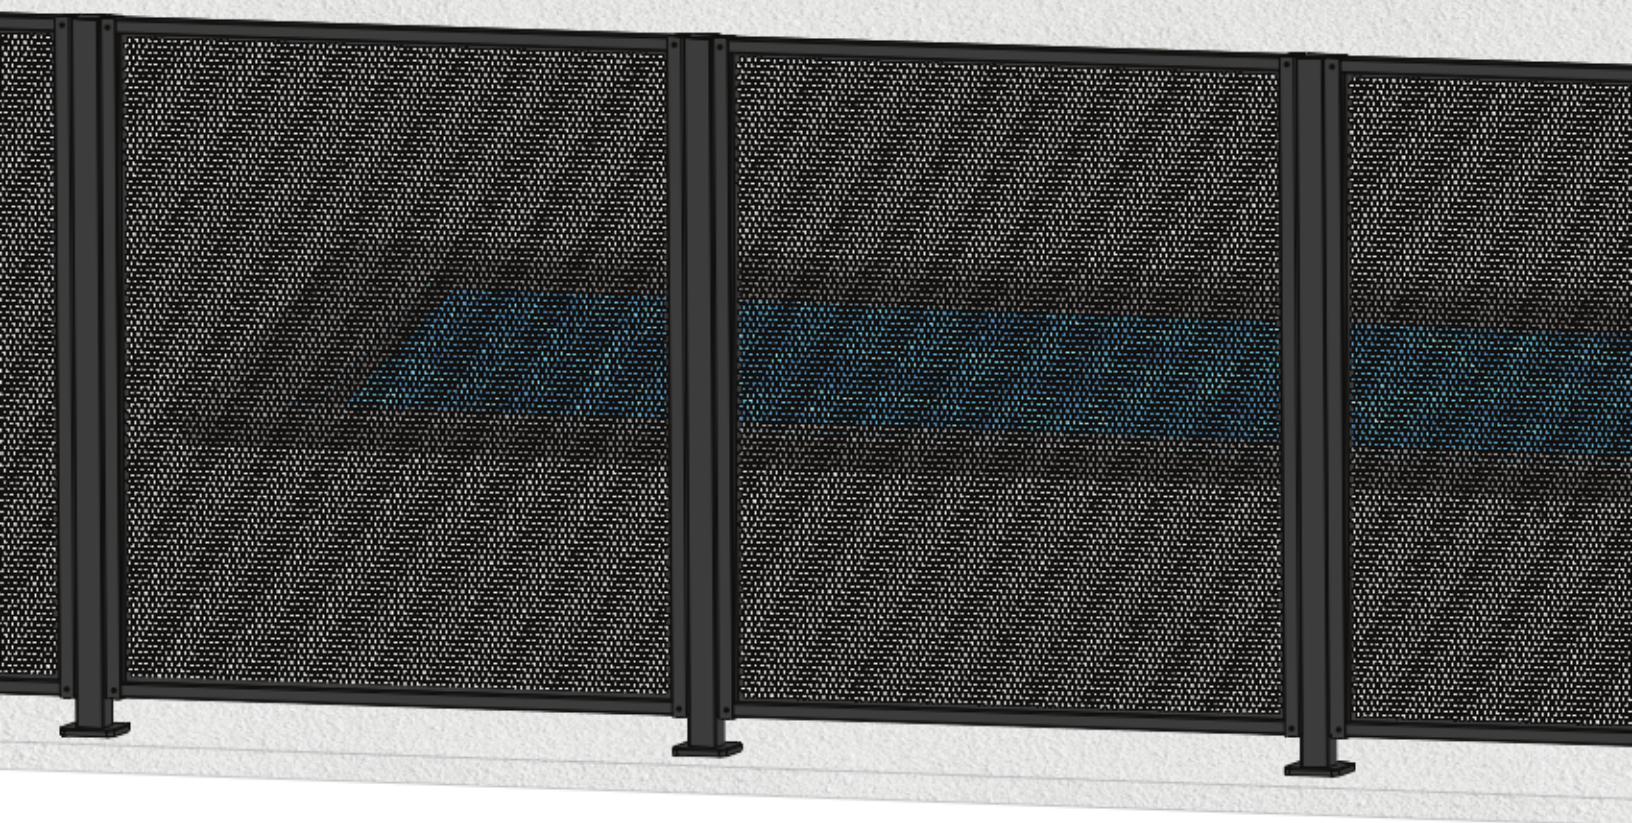

## INSTALLATION INSTRUCTION MANUAL

 
 


# COMPONENTS

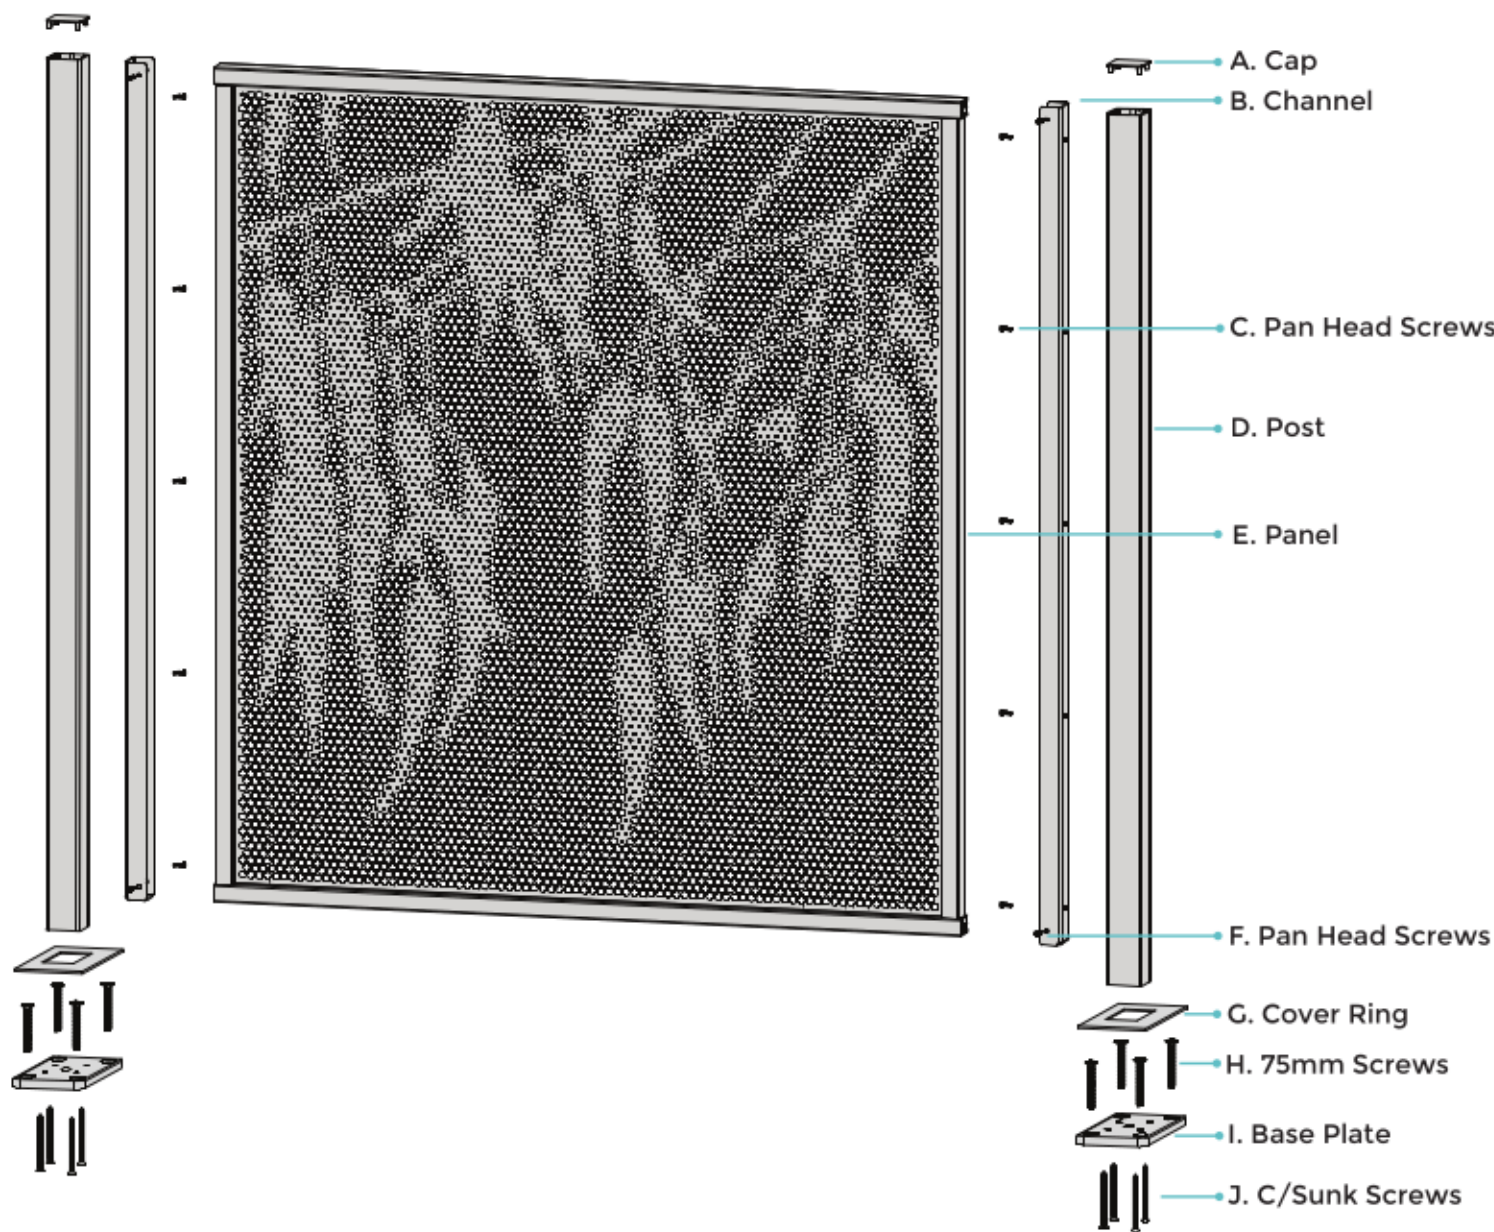

| ITEM | PART                       | DESCRIPTION                                                     |
|------|----------------------------|-----------------------------------------------------------------|
| A    | Cap                        | Covers post top                                                 |
| B    | Channel                    | Levels panel to post                                            |
| C    | Pan Head Screws (Uncoated) | Attach channel to post                                          |
| D    | Post                       | Secures panel in place                                          |
| E    | Panel                      | Perforated panel                                                |
| F    | Pan Head Screws (Coated)   | Attach panel to channel                                         |
| G    | Cover Ring                 | Covers base plate                                               |
| H    | 75mm Screws                | Attach base plate to ground, M6 (Cement) or Batten Screw (Deck) |
| I    | Base Plate                 | Secures post to ground                                          |
| J    | C/Sunk Screw               | Attach base plate to post                                       |


# SPECIFICATIONS

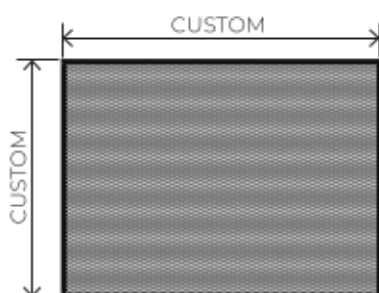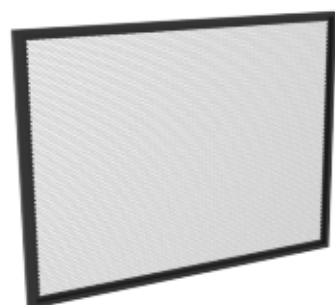

## PANEL

### QTY: as required

 
- Pure Perf or Design Perf
- AS1926.1 tested pool fence system
- Powder coated 2.5mm aluminium

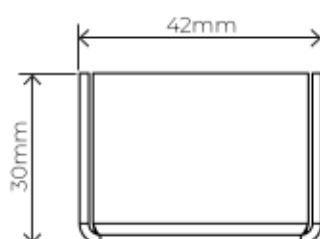

## DELUXE CHANNEL

### QTY: 2 per panel

 
- Pre-drilled fixing holes
- Foot for supporting panel
- Secures panel to post
- Powder coated 3mm aluminium

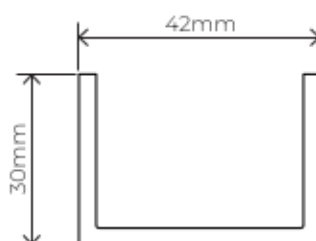

## EXTRUSION CHANNEL

### QTY: 2 per panel

 
- No pre-drilled fixing holes
- No foot for supporting panel
- Secures panel to post
- Powder coated 1.6mm aluminium

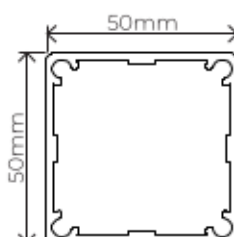

## 50x50

### QTY: 2 per panel

 - Inner flutes for screws & cap
- Provides certified pool fence stability
- Powder coated 1.8mm aluminium

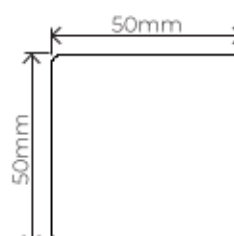


## CAP

### QTY: 1 per post

- Securely plugs into inner post flutes
- Covers the exposed post top
- Powder coated 3mm aluminium


 
# SPECIFICATIONS

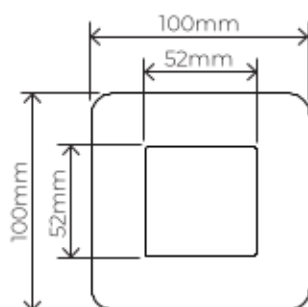

## COVER RING

### QTY: 1 per post

  
- Suitable for 50x50 post
- Covers installed base plate
- Powder coated 3mm aluminium

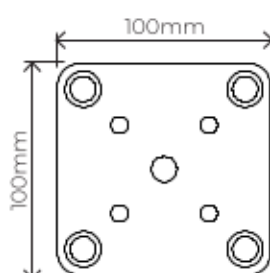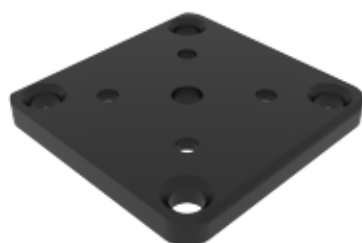

## BASE PLATE

### QTY: 1 per post

 
- Suitable for 50x50 post
- Fixing holes
- Provides pool fence stability
- Powder coated 10mm aluminium



## 12G C/SUNK 50mm SCREW

### QTY: 4 per base plate

 
- Secures base plate to post
- Screws into post flutes
- Post stability ensured
- Mill finish



## M6 75mm CEMENT SCREW

### QTY: 4 per base plate

 - Hex head
- Counter sunk head
- Secures base plate to concrete
- Mill finish

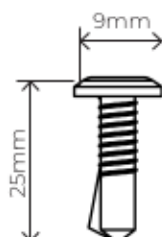

## PAN HEAD SCREW

 
### QTY: 8 coated, 10 uncoated per panel

- Self drilling
- Secures panel to channel (Coated)
- Secures channel to post (Uncoated)
- Powder coated or mill finish

# BASE PLATE POST CONCRETE INSTALL


## BASE PLATE INSTALL

Components.

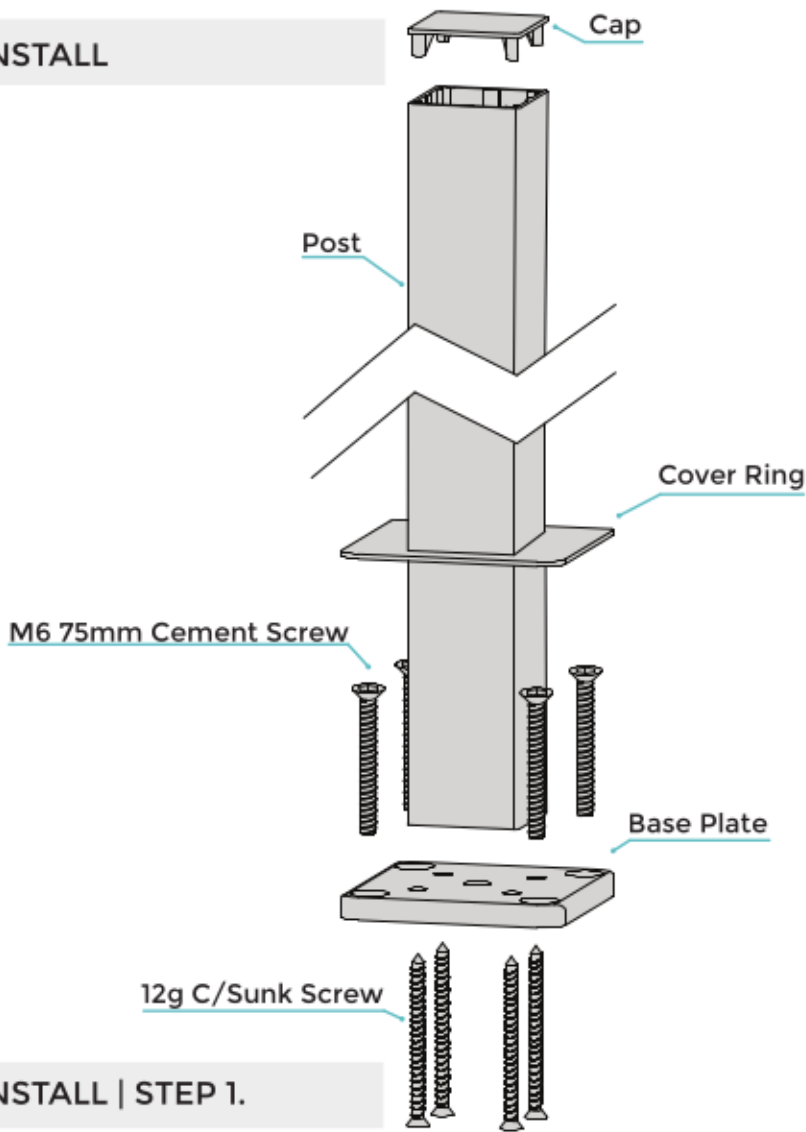


## BASE PLATE INSTALL | STEP 1.

 Attach the base plate & cap to the post.

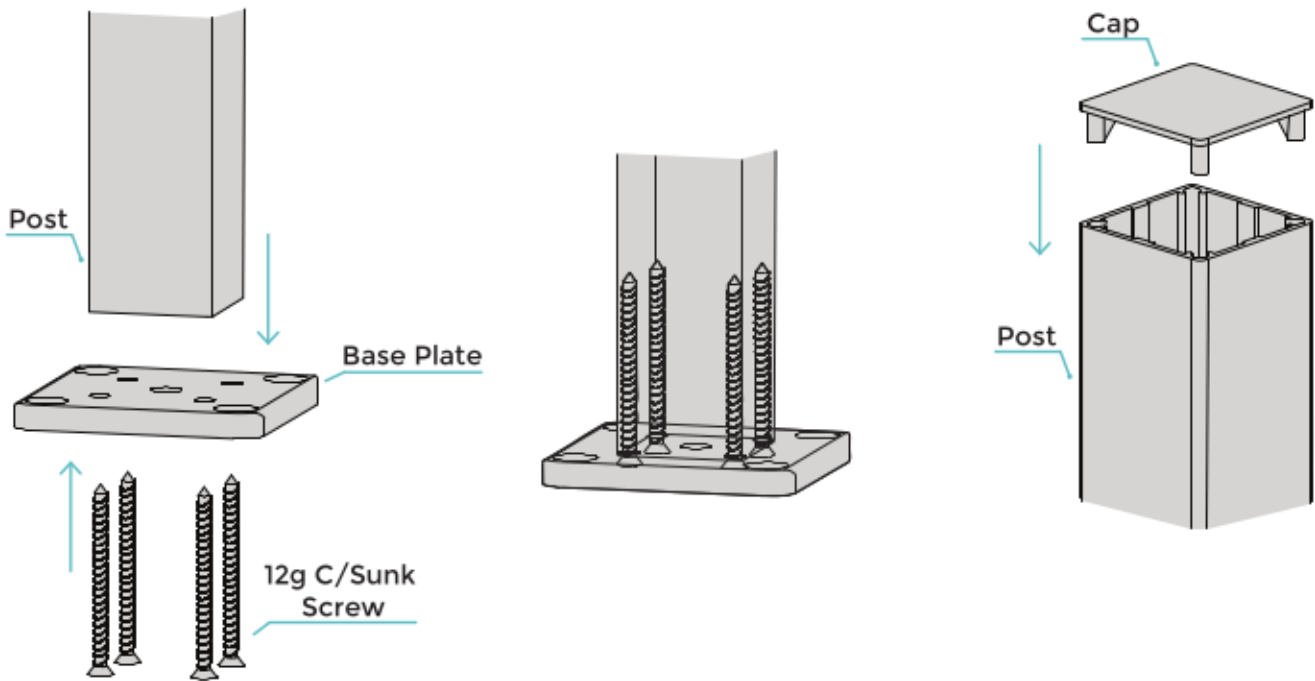



# BASE PLATE POST CONCRETE INSTALL


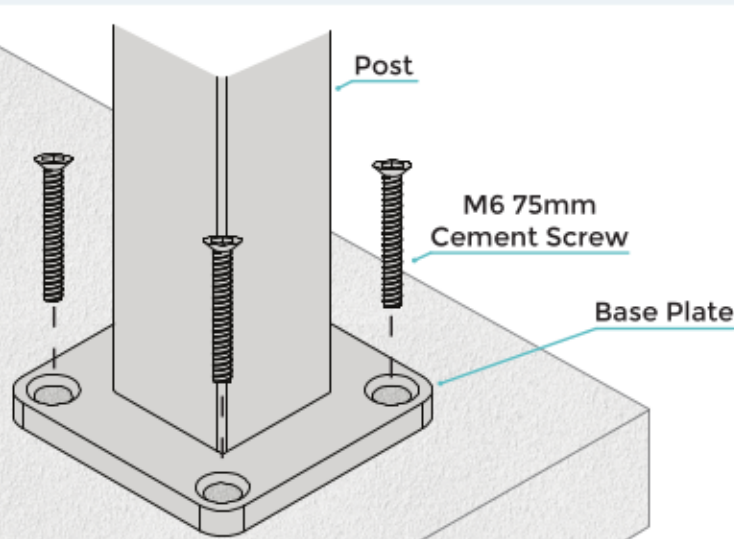 


## BASE PLATE INSTALL | STEP 2.

Using a hex head driver, drill M6 screws (four) through the base plate into the concrete.

## BASE PLATE INSTALL | STEP 3.

  Slide covering over post to cover base plate.

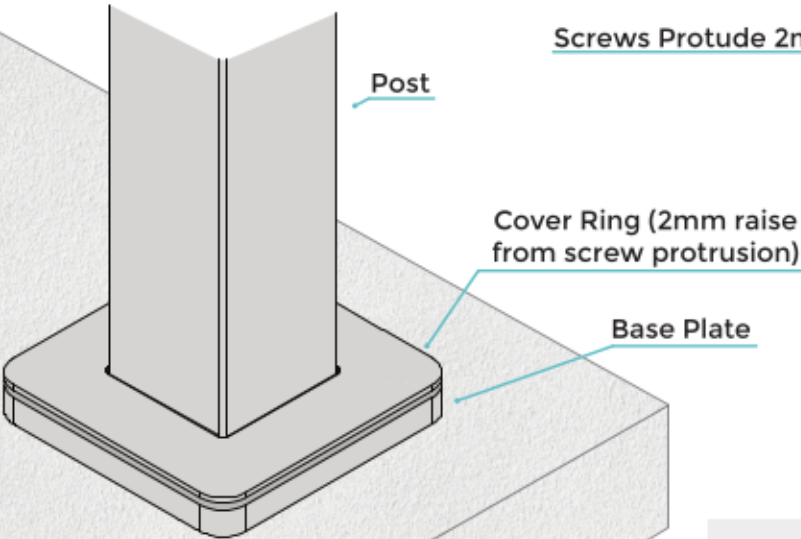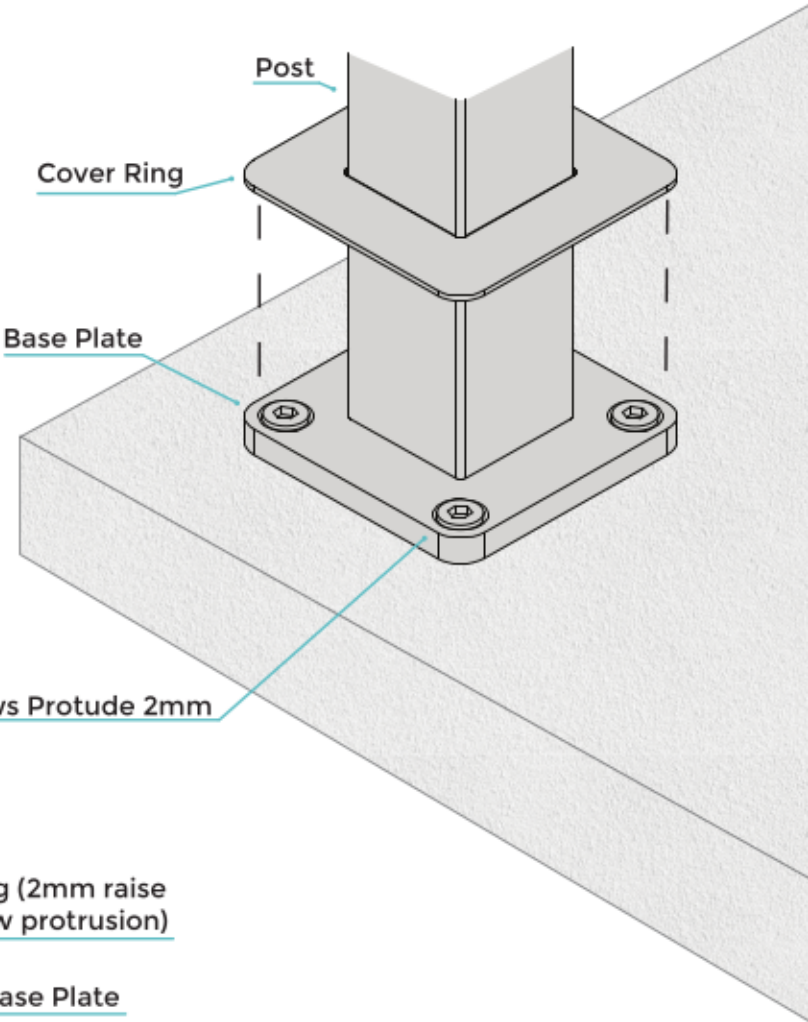


## BASE PLATE INSTALL

Finished base plate post assembly.

# BASE PLATE POST DECK INSTALL


## BASE PLATE INSTALL

 Components.

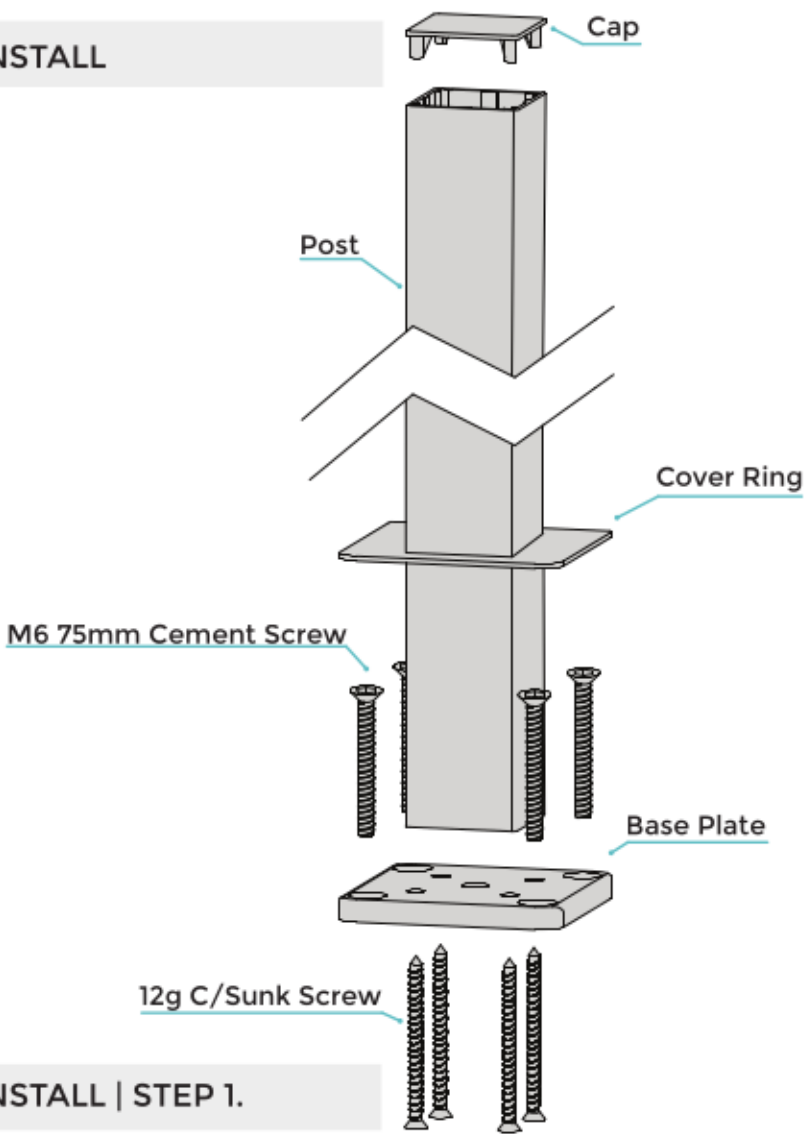

## BASE PLATE INSTALL | STEP 1.

 
Attach the base plate & cap to the post.

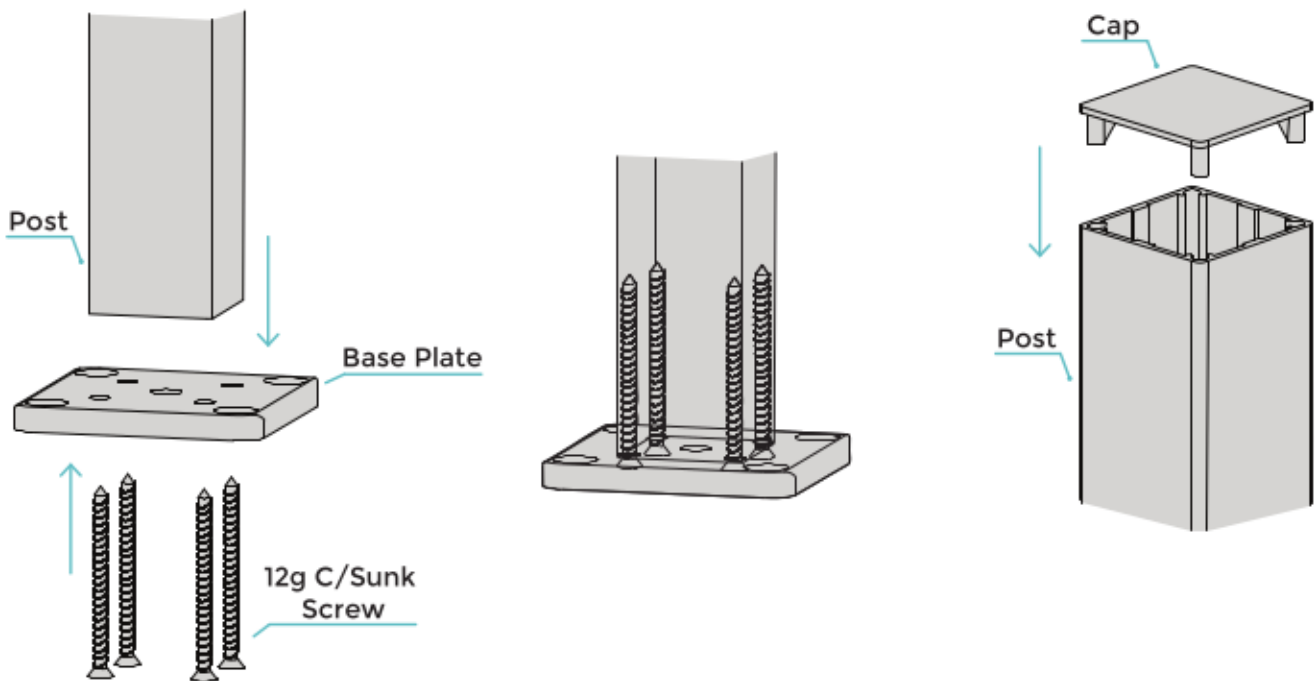

# BASE PLATE POST DECK INSTALL



## BASE PLATE INSTALL | STEP 2.

 Using a hex head driver, drill batten screws (four) through the base plate into the deck. Ensure the 75mm batten screws embed 50mm into the deck joist for post stability.

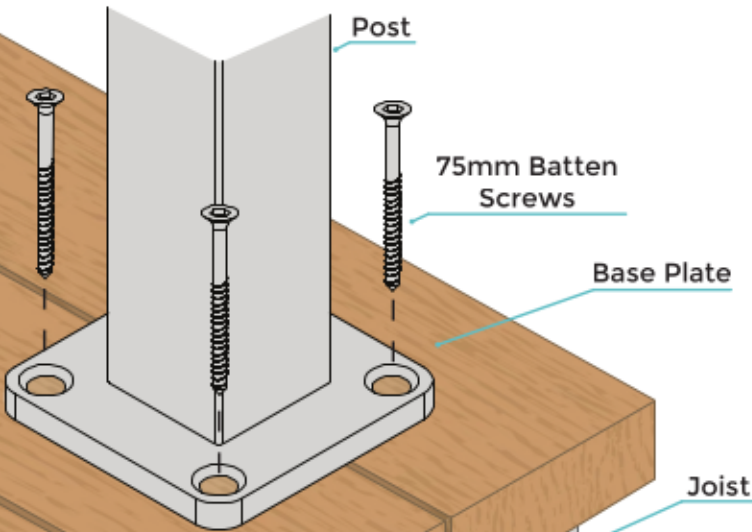

## BASE PLATE INSTALL | STEP 3.

  Slide covering over post to cover base plate.

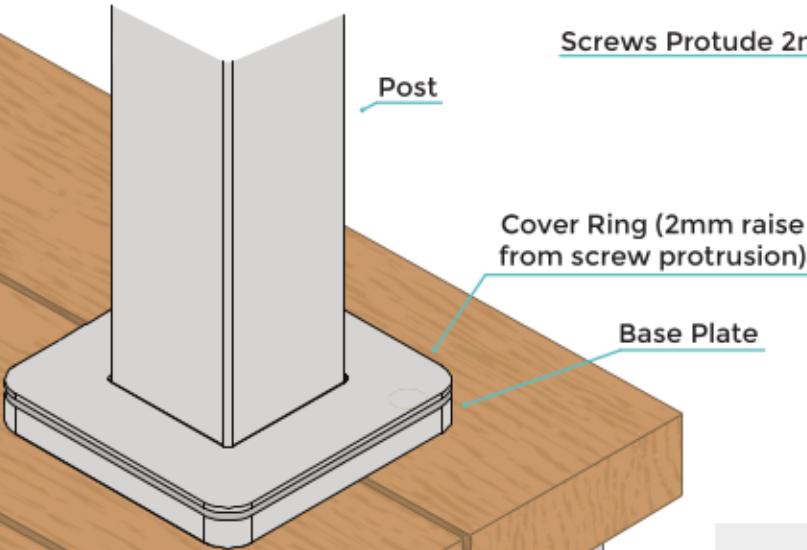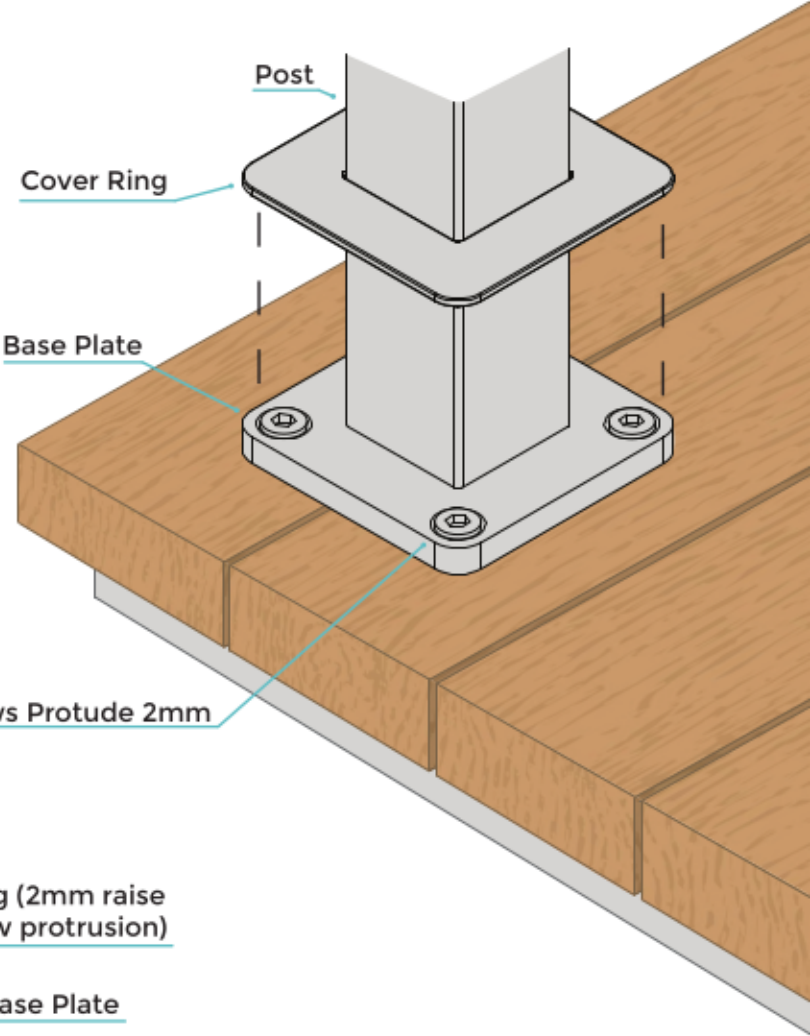




## BASE PLATE INSTALL

Finished base plate post assembly.




# CHANNEL SYSTEMS
   
## DELUXE CHANNEL

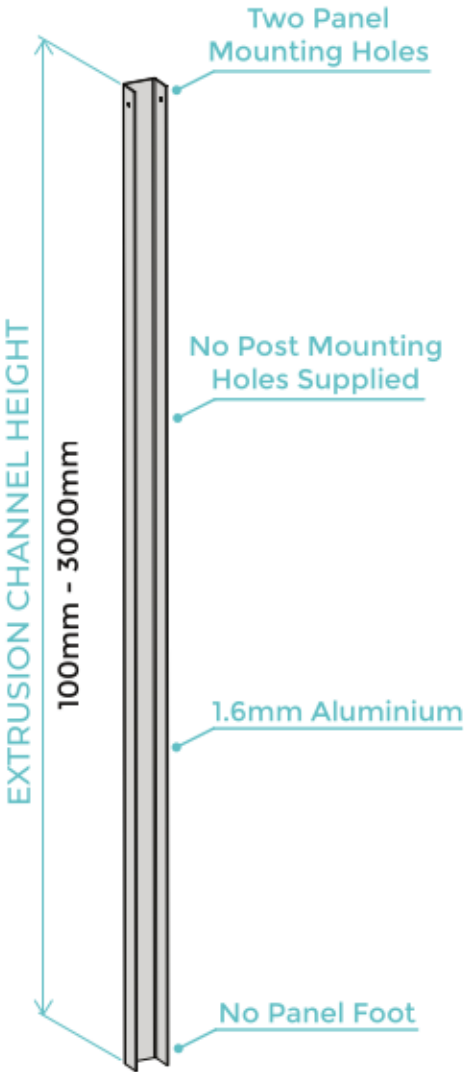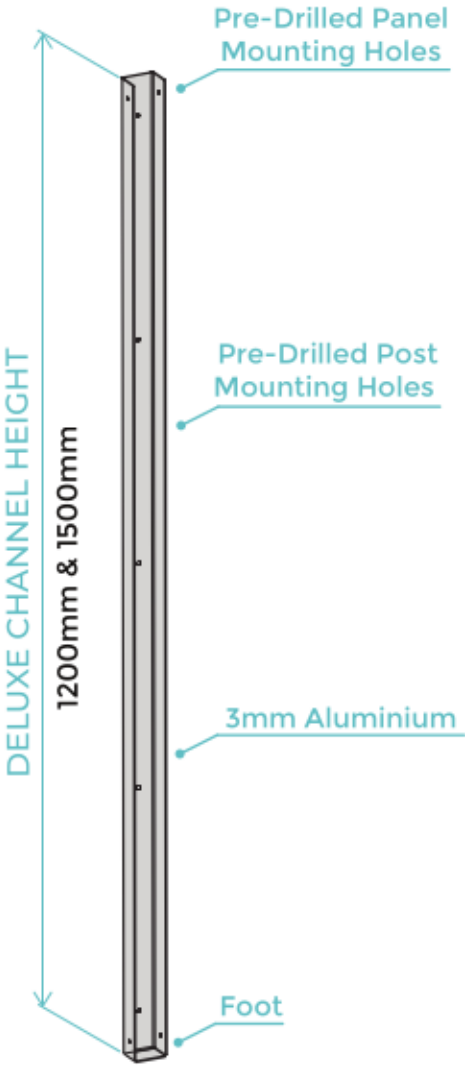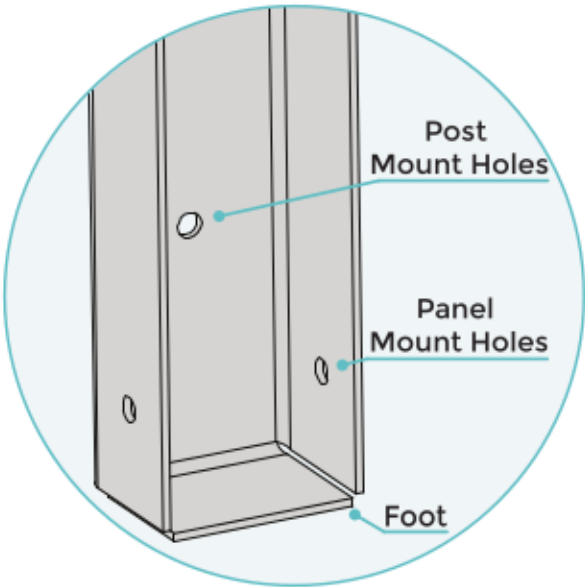


## EXTRUSION CHANNEL

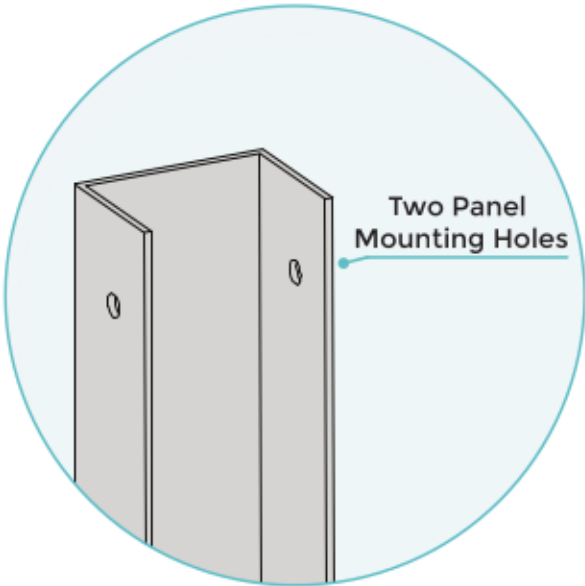 

## PANEL INSTALL

### PANEL INSTALL | STEP 1.

 
Using ten pan head screws (uncoated), attach two channels onto parallel panel posts. Leveling each channel with the top of the post. For deluxe channel use existing drill holes, for extrusion channel create evenly spread holes as pictured.

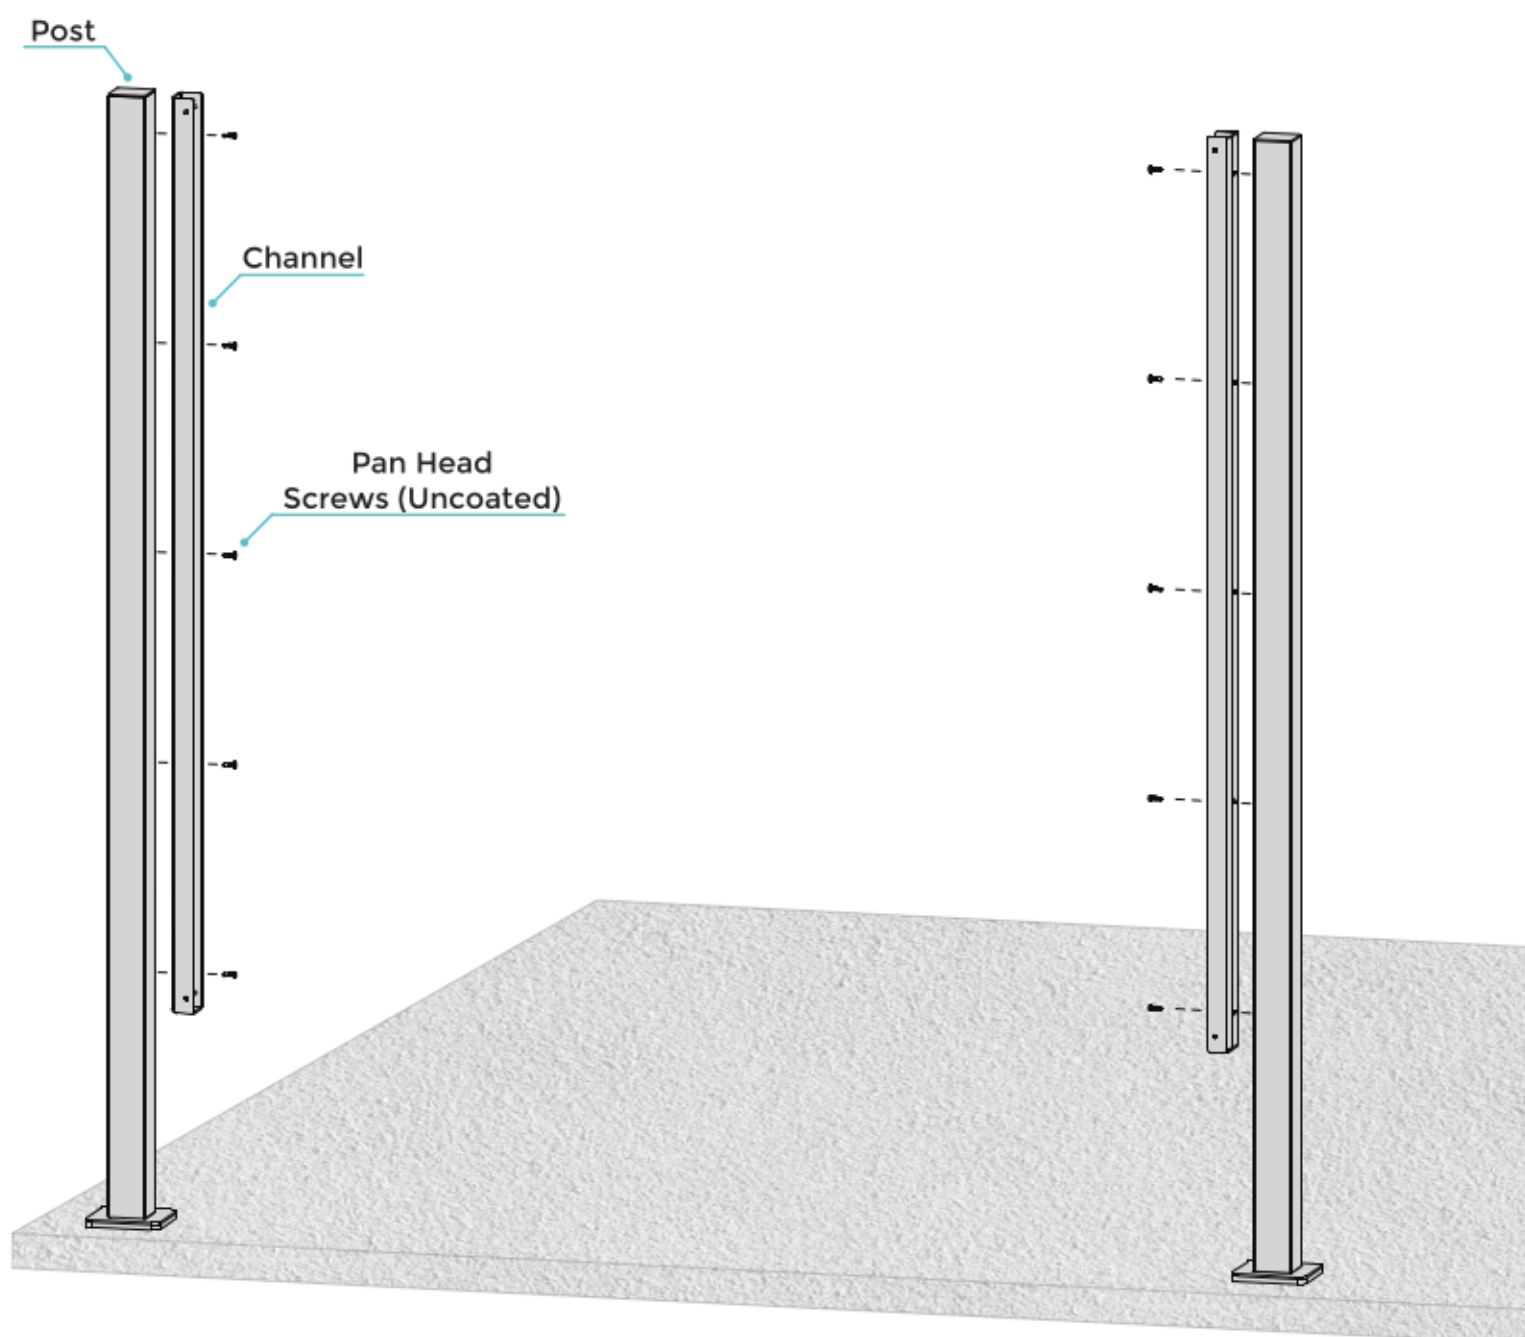

## PANEL INSTALL


### PANEL INSTALL | STEP 2.

 Slide allocated panel into the previously mounted channels. The foot on the deluxe channel fit is designed to hold the panel in place. For extrusion channel fit the installer must hold panel in place.

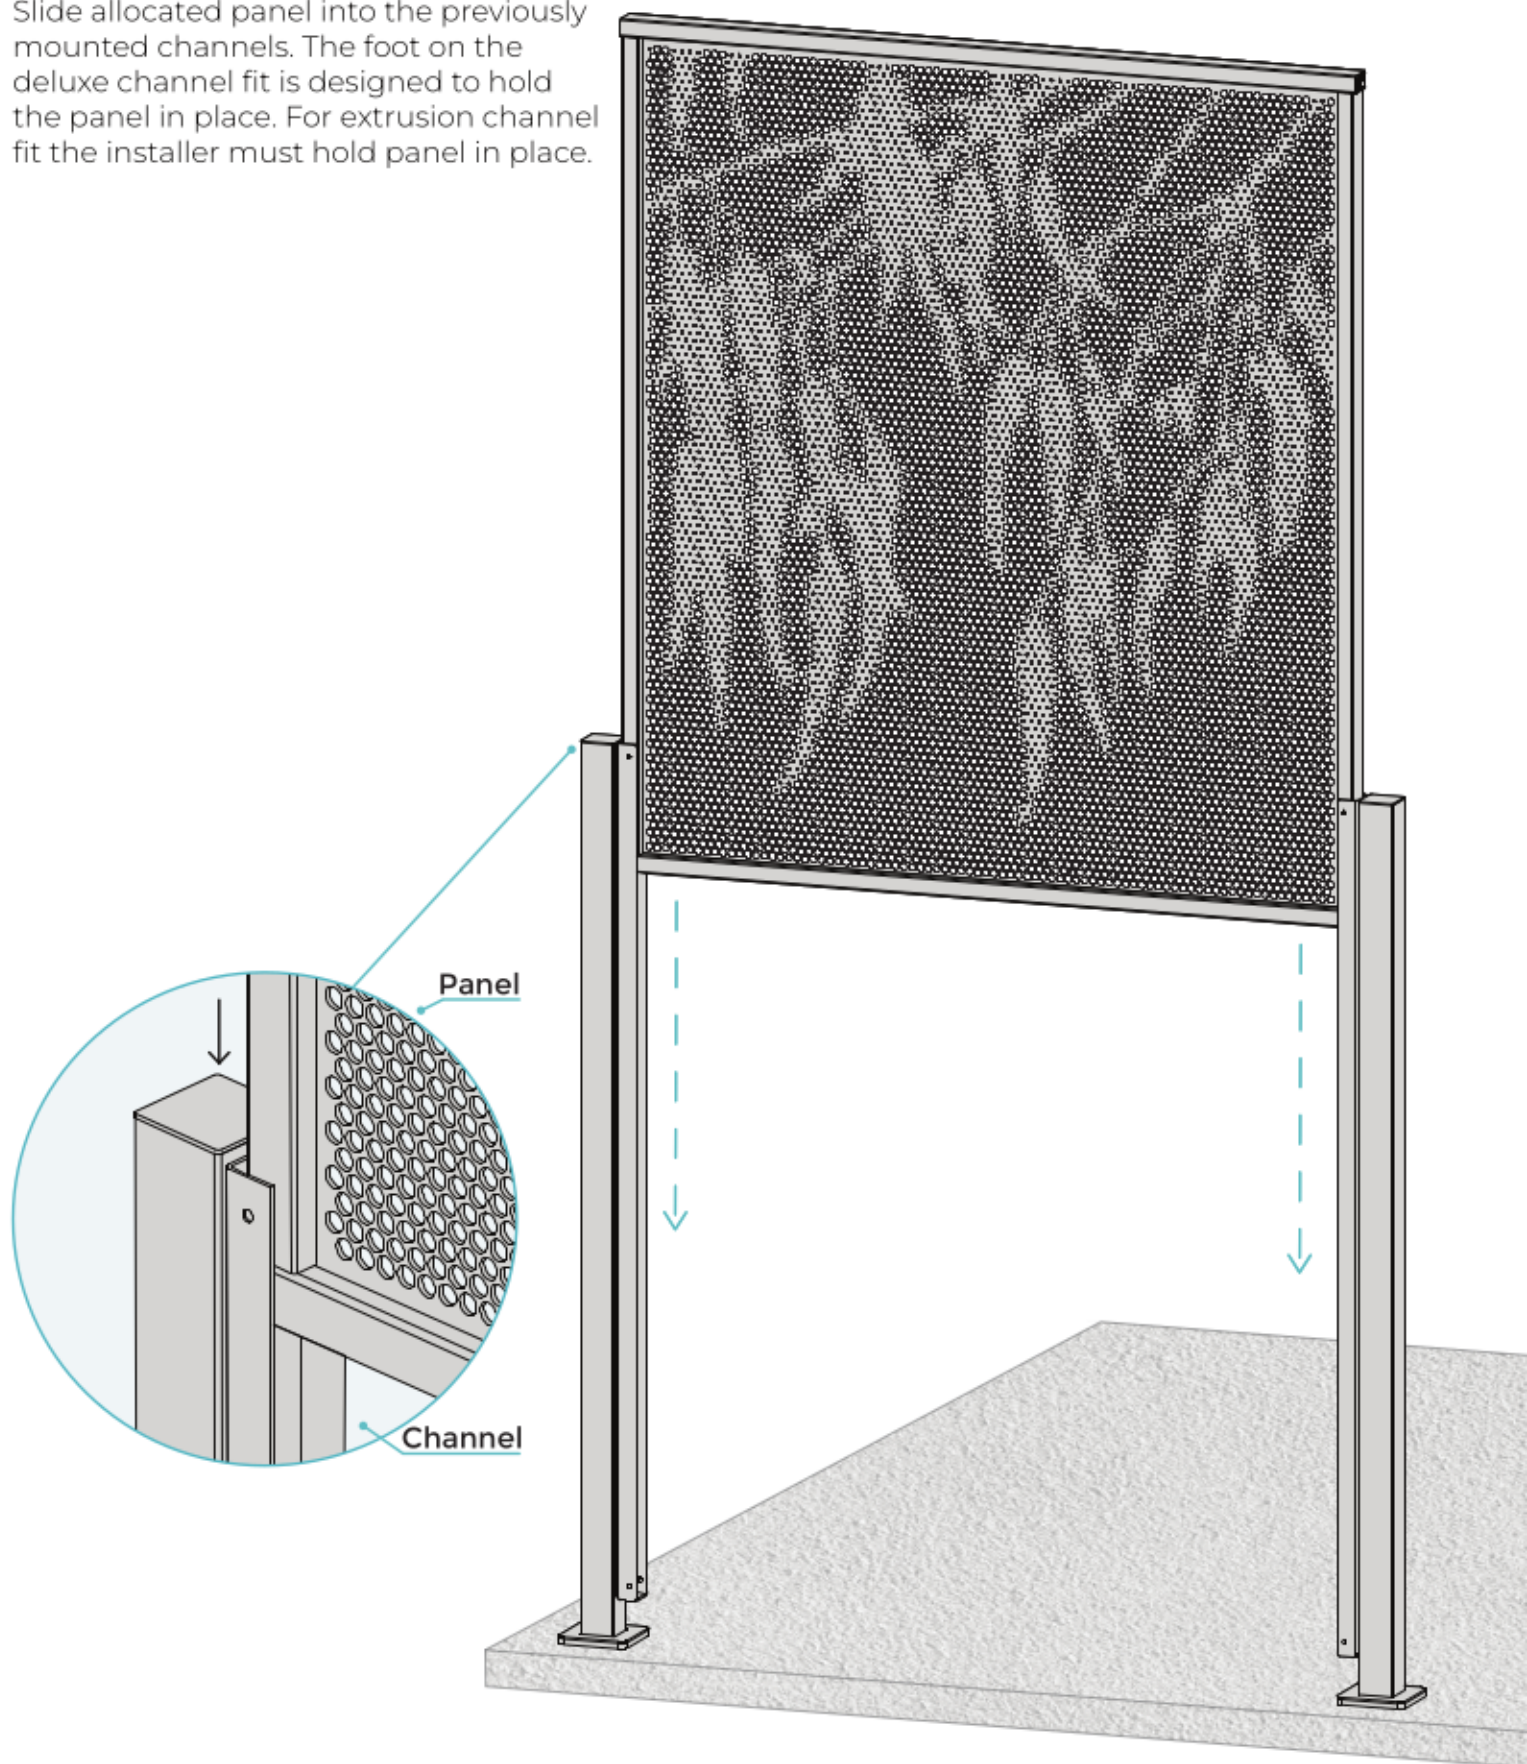



# PANEL INSTALL

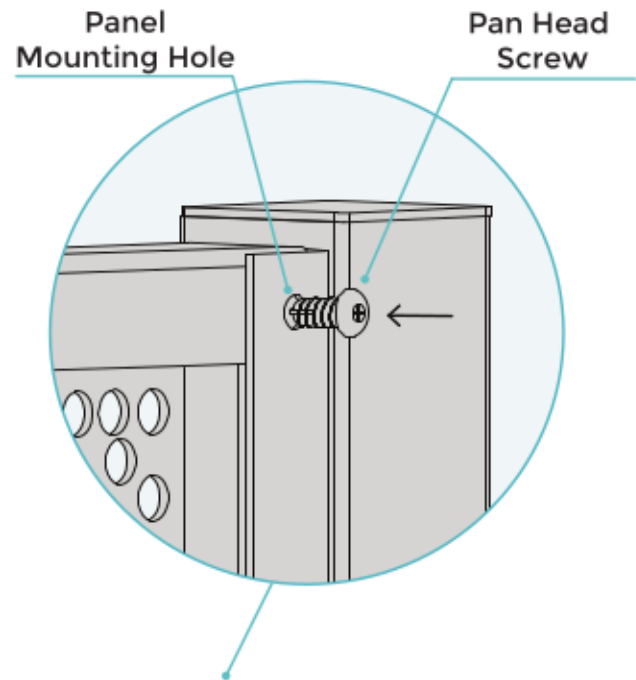 

## PANEL INSTALL | STEP 3.

Lastly, secure the panel by screwing eight pan head screws (coated) into the deluxe channel panel mounting holes, inside and outside the fence. For extrusion channel replicate these holes and fix. installation is now complete.

